




AIR HUMIDIFIER IBL HU600 B

INSTRUCTION MANUAL

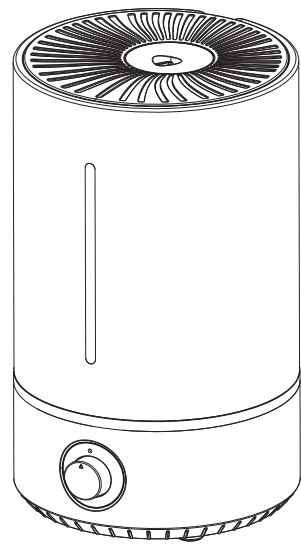

Please read this manual carefully before use, and keep it for any future reference

Rated Voltage:	100-240V	Rated frequency:	50/60 Hz	Mist volume:	250ml/h
Power:	28 W	Dimensions:	200x200x340mm	Capacity:	6L

SAFETY INSTRUCTIONS


- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must be used under the rated voltage and frequency as indicated in rating label.
- To avoid the risk of electrical shock, make sure the appliance is unplugged from the electrical outlet before relocating, servicing, or cleaning it.
- Disconnect the appliance from the mains before filling the water tank.
- Please switch off power before unplugging.
- Unplug power from outlet when not in use.
- Empty and dry the water tank when the device is not in use.
- Do not move the appliance while in use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance must not be positioned directly underneath socket-outlet.
- For indoor household use only.
- Do not immerse the unit in any liquid.
- To protect against electric shock, do not immerse unit, plug or cord in water, do

1

- not spray with liquids. Do not touch the unit with wet or damp hands.
- Keep the unit away from any hot sources.
- Always operate the unit on a dry, level surface.
- Do not cover the unit. Do not place any objects on the top of the unit.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not place the mist outlet close to furniture, a wall, a TV or any other appliance that could be damaged by the moisture.
- Do not overfill the water container more than the MAX mark indicates.
- Do not introduce foreign objects into the device.
- If water spills on the device, immediately unplug it and allow it to dry.
- Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
- Do not switch the appliance on without water.
- Do not use the device if the water in the tank has run out.
- Store the device in a dry, dust-free place out of direct sunlight.
- Always fill the tank with clean water. We recommend you use filtered or distilled water.

OPERATION

PARTS

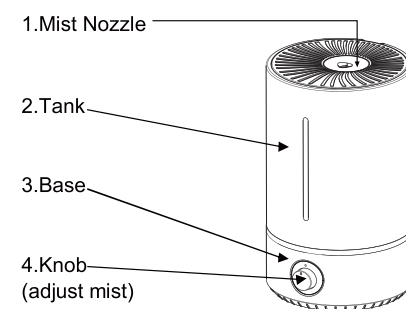

2

Using the step



CLEANING AND MAINTENANCE

In case when the water is hard which means water contains too much calcium and magnesium, they can cause "white powder" problem and give heavy scum on the surface of water basin, transducer and inner surface of the water tank. Scum on the surface of transducer will make the unit work improperly.

WE RECOMMEND:

- Use filtered water or distilled water.
- Clean the transducer, water tank and basin unit every week.
- Change the water in water tank more often to keep it fresh.
- Clean the whole unit, and make sure to keep all parts of the unit dry completely when the unit is not in use.

HOW TO CLEAN THE TRANSDUCER:

- Put 5-10 drops of vinegar on the surface of the transducer, wait for 2-5 minutes.
- Brush out the scum on the surface.
- Rinse the transducer with clean water.

HOW TO CLEAN THE BASIN UNIT:

- Clean the water basin with soft cloth and the vinegar if there is scum in it.
- If the scum is covered on the security switch, drop the vinegar on the scum and clean it out with the brush.
- Rinse the water basin with clean water.

3

TROUBLE SHOOTING

Any trouble found in normal operation, please kindly refer to the following points:

Trouble	Possible reasons	Solution
Does not work	No power supply	Connect power supply, switch on
	No water in water tank and base	Fill with water and wait 10 min.
No mist	The protective foam inside the base was not removed	Remove the protective foam from inside of base
	The internal fan is not running	Contact Technical Service
Mist with strange odour	Defective device	Contact Technical Service
	Dirty water or long time staying water	Clean water tank, fill with clear water
Mist volume too low	Too much dirt in the base	Clean base and atomizer plate
	Water is too dirty or water kept too long in the tank	Clean water tank, fill with clear water
Spray mist is coming out of the area around the jets	Mist nozzle or water tank misplaced	Re-install the nozzle or tank

Notice:

- If the problem cannot be found in the list or it persists, please contact our service center or a qualified technician for further inspection.
- Do NOT open and repair the unit by yourself. Use only qualified agents for repairs or services.

WARRANTY

All the warranty terms finish 12 months after the buying date. It is absolutely necessary to show your buying invoice to be covered by the warranty terms. The warranty covers any defect produced during the manufacturing or caused by the raw material used in this product, and only in the event that the customer has followed the instructions and maintenance showed in the user's manual, and only in the event that the installer has followed the installation directions. This warranty does not cover any damage caused by accidents or negligence. The warranty only covers the customer in case that any reparation as been done in our authorised repairing shops. The warranty DOES NOT COVER any damage or injury caused to people, animals or things caused by an accident or the negligent use of this product. The warranty will be suspended in case of any manipulation of unauthorised people or in case of non-original parts or components.

4